

# Fabric Cleaning

## DON'T

- Do not dry clean.
- Do not over saturate the fabric when spot cleaning using water or a liquid cleaner. Most fabrics have a water based coating on them and oversaturation can leave a “ring” where the coating gets removed or thinned.
- If machine washed, do not dry using high heat.

## DO

- Whenever possible, remove the cover from the frame and lay on a dry clean surface.
- Make sure your hands are clean and/or wear gloves.
- Work from the outer edges toward the center of the spot.
- For light dust or dirt, try removing it by blowing it with an air hose or wiping it with a rag or brush that is lightly moistened with distilled water.
- For tougher spots, try and wipe/rub the spot using a Magic Eraser pad that is lightly moistened with water (preferably distilled). You may also lightly moisten the Magic Eraser (or a rag) with a cleaner such as “Shout”.
- If you are going to try and wash the cover, use a commercial size front-loading washing machine and wash on the gentle cycle with cool water. It is important the graphic be zipped during washing. When drying, use low heat and dry until damp. While the cover is damp, apply it to the frame and let the cover finishing drying- this helps prevent the fabric from shrinking too much and becoming difficult to install.